


INTERACTIVE MULTIMEDIA SOLUTIONS

INTERFACE CONNECTION OVERVIEW ad notam - ACENTIC

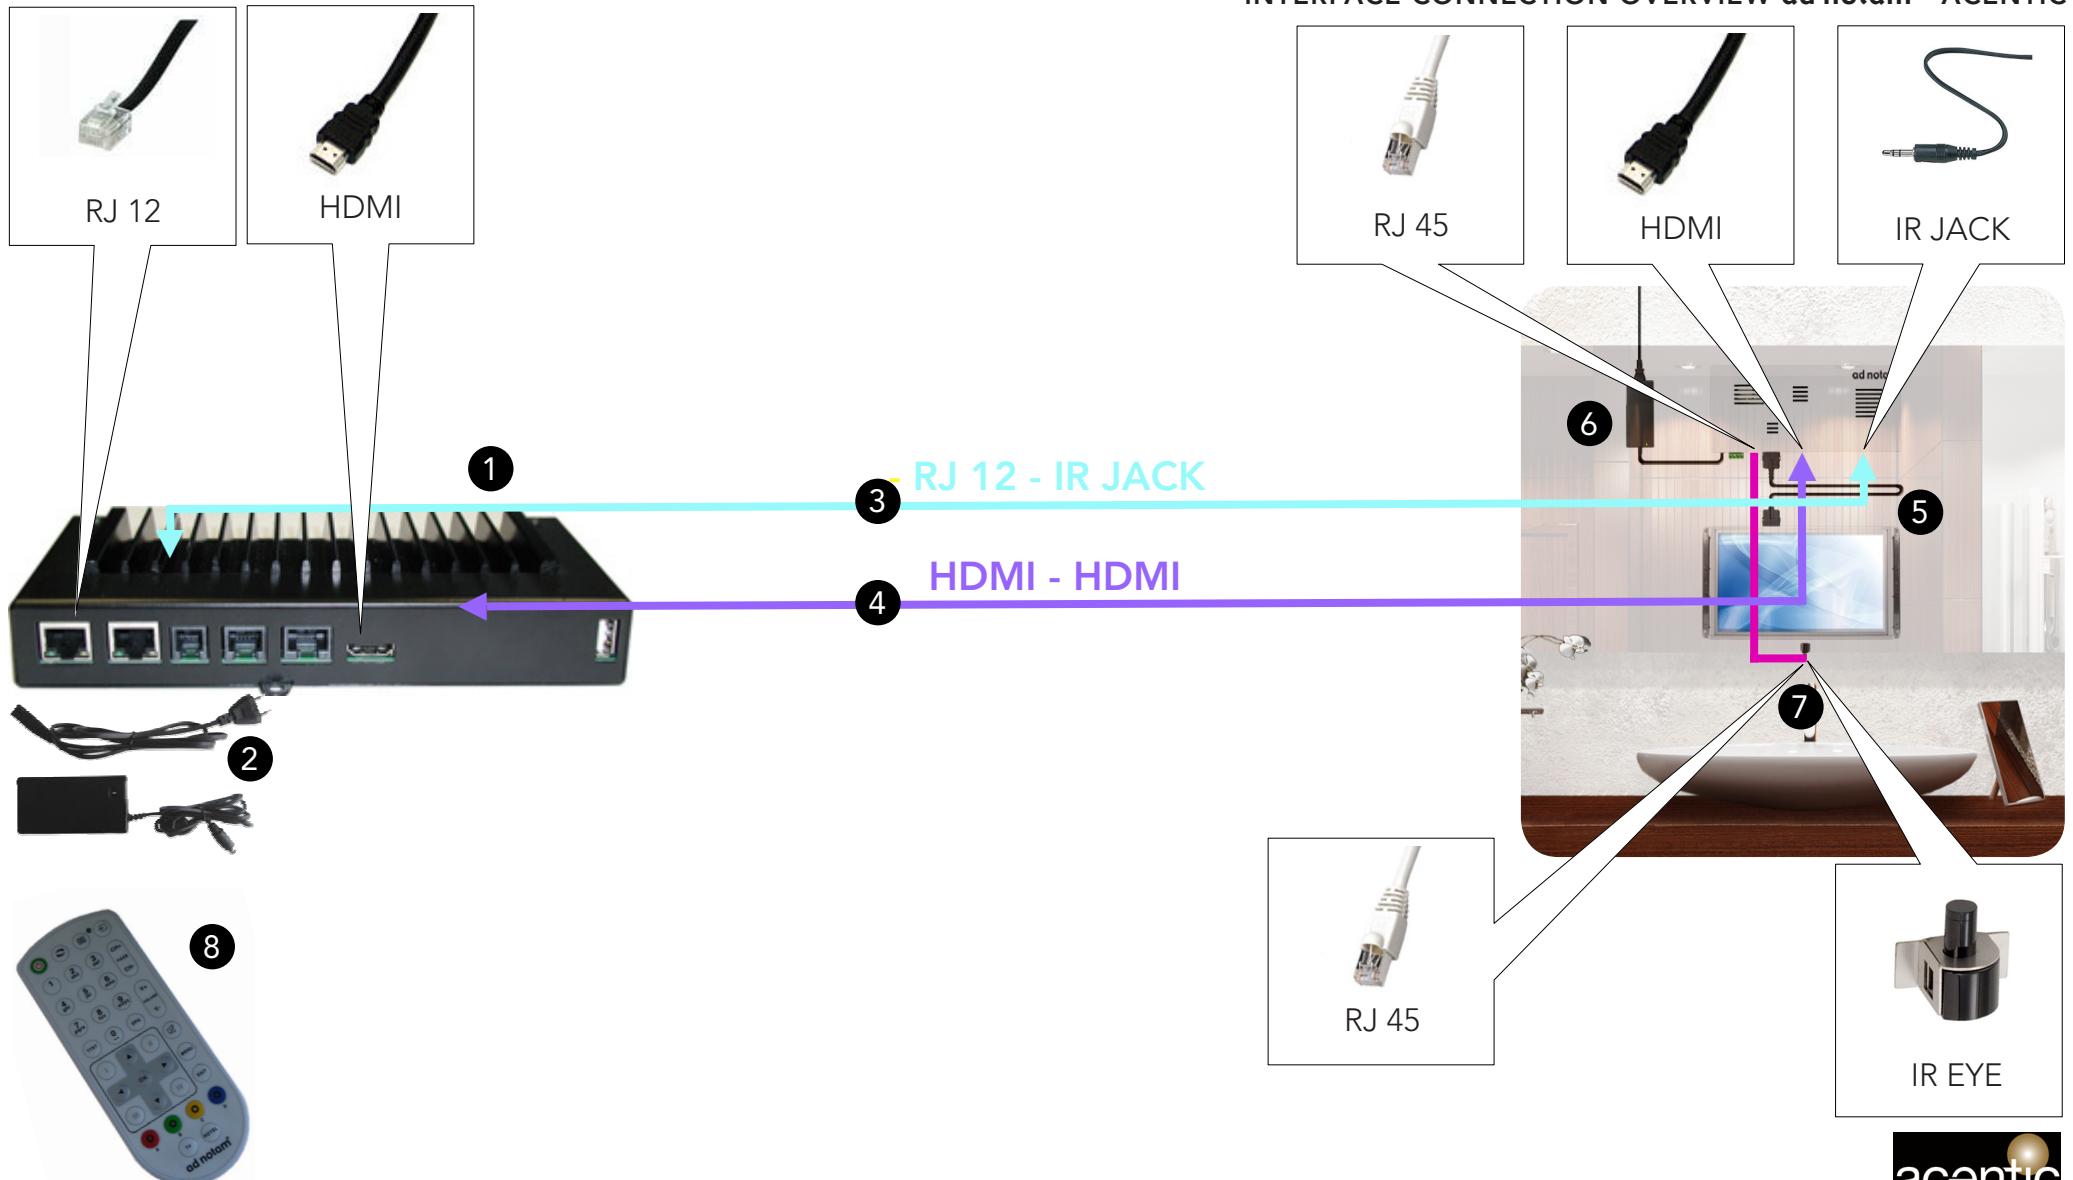

INTERACTIVE MULTIMEDIA SYSTEMS

COMPONENTS ad notam - ACENTIC

#	Provider	Product	Type	Connections
1	ACENTIC	Set top box	Set top box	ad notam Input Box (HDMI™ input) ad notam Input Box (IR output)
2	ACENTIC	Power supply for set top box incl. power cord, Length tbd	Power supply	ACENTIC set top box (DC 12V input) Mains socket
3	ACENTIC	Customized data cable between set top box and controller unit, Length tbd	RJ 12 - IR JACK cable	ACENTIC set top box (RJ 12 input) ad notam Input Box (IR output)
4	ad notam	Commercial HDMI™ cable between set top box and controller unit, Length tbd	HDMI™ - HDMI™ cable	ACENTIC set top box (HDMI™ input) ad notam Input Box (HDMI™ input)
5	ad notam	Flat panel display with external controller unit (Input Box) incl. CCH 36pin Connection Cable	Monitor system	ACENTIC set top box (HDMI™ input) ACENTIC set top box (RJ 12 input) ad notam IR eye (RJ 45 input)
6	ad notam	66W / 5.5A power supply for monitor system incl. power cord, length 720mm	Power supply	ad notam Input Box (DC 12V input) Mains Socket
7	ad notam	Infrared remote control receiver incl. RJ 45 patch cable, Length tbd	Remote control receiver	ad notam IR eye (RJ 45 input) ad notam Input Box (RJ 45 input)
8	ad notam	Waterproof Universal & Learning Infrared Remote Control	Remote control	n.a.

INTERACTIVE MULTIMEDIA SOLUTIONS

SERIAL CONNECTION CABLE ad notam - ACENTIC

